




问鼎 VKING BMS

户储保护板-产品介绍

Residential Energy Storage Protection Board -
Product Introduction

VKPG7-16S150A-LC10A-Y0

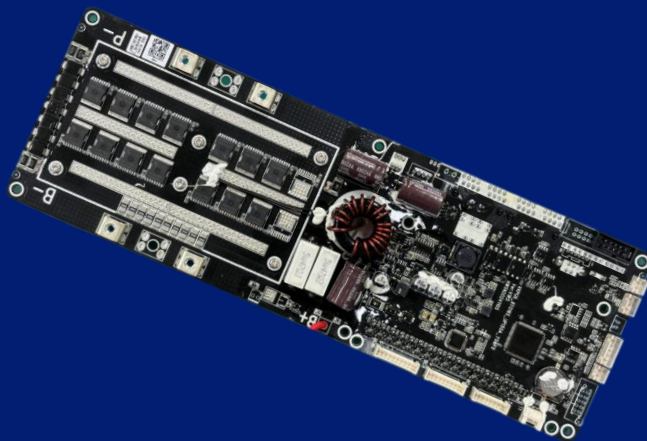

版本 Version : V1.6.1

日期 Date: 2025/07/03

深圳问鼎新能源技术有限公司

Shenzhen Wending New Energy Technology Co., Ltd.

文件更改摘要 Document Change Summary

日期 Date	版本号 Version No.	修订说明 Revision Instruction	制定人 Prepared by	核准人 Approved by
2023/10/31	V1. 1	第一版 First Edition.	韦莉莉 Wei Lili	
2023/11/15	V1. 2	配件清单升级 Upgraded the accessory list.	韦莉莉 Wei Lili	
2024/01/08	V1. 3	更新并机接口定义 Updated the definition of the parallel interface.	邓伟雄 Wei Lili	
2024/06/07	V1. 4	更新逆变器协议支持列表和 CAN 并机操作说明 Updated the inverter protocol support list.	邓伟雄 Deng Weixiong	
2024/11/07	V1. 5	更新逆变器协议支持列表和 CAN 并机操作说明 Updated the inverter protocol support list.	邓伟雄 Deng Weixiong	
2024/12/12	V1. 6	更新 SOC 指示灯描述，更新拨码按键的功能描述 Update the description of the SOC indicator light and the functional description of the DIP switch.	邓伟雄 Deng Weixiong	
2025/07/03	V1. 6. 1	更新页眉 LOGO 及排版格式，内容无实质性修改 The header logo and typesetting format have been updated, with no substantive changes to the content.	罗漫 Luo Man	



产品信息 Product Information

客户名称 Customer Name				
客户型号 Customer Model				
客户料号 Customer Part Number				
产品型号 Product Model	VKPG7-16S100A-LC10A-Y0			
版本 Version	V1. 6. 1			
日期 Date	2025-07-03			
产品清单 Product List (标配) (Standard Configuration)	序号 S/N	名称 Name	型号 Model	数量 Qty.
	1	保护板 Split protection board	VKPG7-16S150A-LC10A-Y0	1pc.
	2	弱电开关线 Weak current switch wire	2. 54MM 间距 单头 XP HOUSing 26AWG 另一头浸锡 长度 3MM 线长 50cm (XC070) Single end with a spacing of 2.54MM, XPHOUSing 26AWG, the other end is tinned with a length of 3MM, and the wire length is 50cm (XC070)	1pc.
	3	动力连接线 (B+) 香蕉端子 Power connecting wire Banana Terminal	动力连接线 B+ 电池端配 M6 端子环 3.5 香蕉母头镀金 标准长度 30cm (XC102) power connecting cable (B+) is equipped with an M6 terminal ring at the battery end, a 3.5mm gold-plated banana female connector, and a standard length of 30cm(XC102)	1pc.
	4	温度采集线 Temperature acquisition wire	温度采集线 (水滴状) 标准长度 65cm (XC001) Temperature acquisition wire (in the shape of a water drop) with standard length of 65cm (XC001)	1pc.
	5	电压采集线 BC0~8 Voltage acquisition wire BC0~8	电压采集线 0-8 标准长度 85cm (XC002) Voltage acquisition wire 0-8 with standard length of 85cm (XC002)	1pc.
	6	电压采集线 BC9~16 Voltage acquisition wire BC9~16	电压采集线 9-16 标准长度 85cm (XC003) Voltage acquisition wire 9-16 with standard length of 85cm (XC003)	1pc.
问鼎 VKING BMS			客户确认 Customer Confirmation	
制定 Prepared by			审查 Reviewed by	
核准 Approved by			核准 Approved by	



产品功能配置表 Product Function Configuration Table

标配功能 Standard Functions	序号 S/N	功能 Function	定义描述 Definition Description	备注 Remarks	客户 选择 Customer Selection
	1	存储 Storage	数据记录>1 万条 Data recording > 10,000 pieces		
	2	充电限流 Charging current limiting	10A（定义：电流>80A 开启）默认不使能 10A (Definition: Activated when current >80A); default disabled		
	3	反接保护 Reverse connection protection	标配 Standard configuration		
	4	弱电开关 Weak current switch	标配（提供线材和接口，开关客户自行配置） Standard configuration (Wire and interface are provided, and the switch is configured by the customer)		
	5	蜂鸣器 Buzzer	标配 Standard configuration		
	6	LED 灯 LED light	6 个 LED 灯（定义：1 个 ALM；1 个 RUN；4 个 SOC 指示） 6 LED lights (Definition: 1 ALM; 1 RUN; 4 SOC indicators)		
	7	RGB 全彩灯 RGB full-color lights	标配支持 RGB 全彩灯条，12V 供电，单线通讯，WS2815 灯珠 Standard RGB full-color LED strip, with 12V power supply, single-wire communication and WS2815 LED lamp		
	8	复位按键 Reset button	1 个复位按键（定义：长按 4S BMS 复位） 1 reset button (Definition: Long press for 4S to reset the BMS)		
	9	RTC 时间 RTC time	标配 Standard configuration		
	10	USB 通讯 USB communication	USB TYPE B 方口（定义：上位机接口和软件升级接口） USB TYPE B square port (Definition: Upper computer interface and software upgrade interface)		
	11	RS485-1	标配（定义：逆变器通讯口） Standard configuration (Definition: Inverter communication port)		
	12	CAN	标配（定义：逆变器通讯口） Standard configuration (Definition: Inverter communication port)		
	13	RS485-2	标配（定义：电池包并机口） Standard configuration (Definition: Battery pack parallel port)		
	14	预充功能 Pre-charging function	标配 Standard configuration		
	15	唤醒功能 Wake-up function	标配（定义：实现充电唤醒）Standard configuration (Definition: Achieve charging wake-up)		



选配功能 Customer's signature	16	拨码功能 DIP function	四位拨码 (电池并机时 PACK 号选择, 1 号为主机) 4-bit DIP switch (PACK number selection for battery paralleling, with 1# as the master)		
	1	显示屏 Display screen	三寸 LCD 显示屏 3-inch LCD display screen		
	2	高清触摸 显示屏 High-definition touch screen	4.3 寸高清触摸显示屏 (主板需更改电源跳线) 4.3" High-definition touch screen (requires main board power jumper modification)		
	3	干接点 Dry contact	双路 (定义: 干接点 1 常开, 故障保护时闭合; 干接点 2 常开, 低电量告警闭合) Dual ways (Definition: Dry contact 1 is normally open and closes during fault protection; dry contact 2 is normally open and closes for low battery alarm)		
	4	拨码选协议 Protocol selection via DIP switch	选配 8 位拨码开关 (定义: 1 位选主机或从机; 2~6 位主机时选通讯协议, 从机时选当前电池包地址; 7 位为 RS485-1 通讯口末端电阻选择; 8 位为 CAN 通讯口末端电阻选择) Optional 8-bit DIP switch configuration (Definition: bit 1: master/slave selection; bits 2-6: protocol selection for master, or battery pack address for slave; bit 7: selection for RS485-1 end resistor; bit 8: selection for CAN end resistor)		
	5	LED 灯面板 LED panel	9 个 LED 灯显示面板 (定义: 1 个 ALM; 1 个 RUN; 1 个 ON/OFF; 6 个 SOC 指示) 9-LED display panel (Definition: 1 ALM, 1 RUN, 1 ON/OFF, 6 SOC indicators)		
	6	复位按键 Reset button	1 个复位按键 (定义: 长按 4S BMS 复位) 1 reset button (Definition: Long press for 4S to reset the BMS)		
	7	支持低串电芯 Support low series battery cells	支持 8~15 串电芯电池包 Support battery packs with 8 to 15-series battery cells	需定制软硬件 Customized hardware and software are required	
	8	加热功能 Heating function	提供电池供电加热膜接口, 控制开启关闭 Provide an interface for the battery-powered heating film and control the on and off	需定制软硬件 Customized hardware and software are required	
	9	二次保护 Secondary protection	提供电池供电继电器接口, 实现二次保护功能 Provide an interface for the battery-powered relay to achieve the secondary protection function	需定制软硬件 Customized hardware and software are required	
	10	WIFI 模块 WIFI module	提供 WIFI 功能和云平台功能 Provide WIFI function and cloud platform function	需定制软硬件 Customized hardware and software are required	



	11	防盗窃模块 Anti-theft module	防盗窃功能，配合云平台实现远程提醒 Anti-theft function, and achieve remote reminder in cooperation with the cloud platform	需定制软硬件 Customized hardware and software are required	
	12	带灯弱电开关 Illuminated weak-current switch	预留带灯弱电开关灯的接口 Reserved interface of illuminated weak-current switch	需定制硬件 Customized hardware required	
客户新增需求 Customer's new requirements:					
客户签字确认 Customer's signature:					



目录 Table of Contents

产品信息 Product Information	3
产品功能配置表 Product Function Configuration Table	4
一、 简介 Introduction	9
二、 功能特性 Functional Characteristics	9
三、 功能示意框图 Functional Schematic Block Diagram	9
四、 环境要求 Environmental Requirements	10
五、 电气特性 Electrical Characteristics	10
5.1. 基本参数设置 Basic Parameter Settings	10
5.2. LED 指示说明 LED Indication Instructions	13
5.3. 蜂鸣器动作说明 Buzzer Action Instructions	14
5.4. 弱电开关说明 Weak Current Switch Instructions	15
5.5. 休眠及唤醒 Hibernation and Wake-up	15
5.6. 充电限流功能 Charging Current Limiting Function	15
5.7. 加热或散热功能（预留）Heating or Cooling Function (Reserved)	15
六、 通信说明 Communication Instructions	16
6.1. USB 通信 USB Communication	16
6.2. RS485 通信 RS485 Communication	16
6.3. CAN 通信 CAN Communication	16
6.4. 拨码开关设置 DIP Switch Configuration	16
七、 电磁兼容性 Electromagnetic Compatibility	20
7.1. 静电放电抗扰性 Electrostatic Discharge Immunity	20



7. 2. 传导骚扰限值 Conducted Emission Limits	20
7. 3. 辐射骚扰限值 Radiated Emission Limits	20
7. 4. 浪涌（冲击）抗扰性 Surge (Impact) Immunity	20
八、 接口定义 Interface Definition	21
8. 1. 通信接口图示 Communication Interface Diagram	21
8. 2. 电气接口定义 Definition of Electrical Interfaces	22
8. 3. 安装连接说明 Installation and Connection Instructions	23
九、 协议支持 Protocol Support	24
十、 实物图与尺寸图 Physical Diagram and Dimension Diagram	25
10. 1. 主控板标配图 Standard Diagram of Main Control Board	25
10. 2. 主板尺寸图 Dimension of Main Board	26
十一、 使用注意事项 Precautions for Use	26
附录 Appendixes	27





四、环境要求 Environmental Requirements

项目 Item	参数 Parameter	单位 Unit
工作温度 Operating temperature	-20~75	℃
储存温度 Storage temperature	-20~75	℃
工作湿度 Operating humidity	≤85	%RH
储存湿度 Storage humidity	≤95	%RH
温度测量 Temperature measurement	-40~125	℃
大气压力 Atmospheric pressure	70~106	kPa

表4-1 环境要求 Table 4-1 Environmental Requirements

五、电气特性 Electrical Characteristics

5.1. 基本参数设置 Basic Parameter Settings

注：以下参数除特殊注明以外，均为 25℃环境温度下测试。BMS 对单体电池电压测量范围 0~5V，总电压测量范围范围 0~60V。充放电温升均不应超过 75℃

Note: The following parameters are tested at an ambient temperature of 25℃, unless otherwise specified. The voltage measurement range of a single cell by the BMS is 0-5V, and the total voltage measurement range is 0-60V. The temperature rise during charging and discharging should not exceed 75℃.

序号 S/N	指标项目 Index Items		出厂默认参数 Factory Default Parameters	是否可设 Whether Adjustable	备注 Remarks
1	单体过充保护 Single cell overcharge protection	单体过充告警电压 Single cell overcharge alarm voltage	3550±10mV	可设 Yes	
		单体过充保护电压 Single cell overcharge protection voltage	3650mV	可设 Yes	
		单体过充保护延时 Single cell overcharge protection delay	1000mS	可设 Yes	
	单体过压保护 解除 Single cell overvoltage protection release	单体过充保护解除电压 Single cell overcharge protection release voltage	3450±10mV	可设 Yes	
		容量解除Capacity release	SOC≤96%	可设 Yes	
		放电解除Discharge release	放电电流 > 1A Discharging current >1A		
2	单体过放保护 Single cell over-discharge protection	单体过放告警电压 Single cell over-discharge alarm voltage	2700±10mV	可设 Yes	
		单体过放保护电压 Single cell over-discharge protection voltage	2600±10mV	可设 Yes	
		单体过放保护延时Single cell over-discharge protection delay	2000mS	可设 Yes	
	单体过放保护 解除Single cell over-discharge protection release	单体过放保护解除电压 Single cell over-discharge protection release voltage	2800±10mV	可设 Yes	
		有充电时解除 Release when charging	接入充电器可激活 Activated when the charger is connected		
3	总体过充保护 Overall overcharge protection	总体过充告警电压 Overall overcharge alarm voltage	56.00V	可设 Yes	
		总体过充保护电压 Overall overcharge protection voltage	57.60V	可设 Yes	
		总体过充保护延时 Overall overcharge protection delay	1000mS	可设 Yes	



	总体过压保护解除 Overall overvoltage protection release	总体过充保护解除电压 Overall overcharge protection release voltage 容量解除 Capacity release	54.40V SOC≤96%	可设 Yes 可设	
		放电解除Discharge release	放电电流 > 1A Discharging current >1A		
4	总体过放保护 Overall over-discharge protection	总体过放告警电压 Overall over-discharge alarm voltage	44.00V	可设 Yes	
		总体过放保护电压Overall over-discharge protection voltage	42.40V	可设 Yes	
		总体过放保护延时 Overall over-discharge protection delay	2000mS	可设 Yes	
	总体过放保护解除Overall over-discharge protection release	总体过放保护解除电压 Overall over-discharge protection release voltage	45.60V	可设 Yes	
		有充电时解除Release when charging	接入充电器可激活 Activated when the charger is connected		
5	充电过流保护 Charging overcurrent protection	充电过流告警电流 Charging overcurrent alarm current	155A±1A	可设 Yes	连续出现 10 次，将锁定该状态，不再自动解除解除 If it occurs continuously for 10 times, the state will be locked and will not be automatically released
		充电过流保护电流 Charging overcurrent protection current	160A±1A	可设 Yes	
		充电过流保护延时 Charging overcurrent protection delay	2000mS	可设 Yes	
	充电过流保护解除Charging overcurrent protection release	自动解除 Automatically release	充电电流 < 150A 5min 后自动解除 Automatically release when the charging current is <150A for 5 minute		
		放电解除Discharge release	放电电流 > 1A Discharging current >1A		
6	放电过流1保护Discharging overcurrent 1 protection	放电过流1告警电流 Discharging overcurrent 1 alarm current	155±1A	可设 Yes	连续出现 3 次，将锁定该状态，不再自动解除If it occurs continuously for 3 times, the state will be locked and will not be automatically released
		放电过流1保护电流 Discharging overcurrent 1 protection current	165±1A	可设 Yes	
		放电过流1保护延时 Discharging overcurrent 1 protection delay	1000mS	可设 Yes	
	放电过流 1 保护解除 Discharging overcurrent 1 protection release	自动解除Automatically release	放电电流 < 150A 5min 后自动解除 Automatically release when the discharging current is < 150A for 5 minutes		
		充电解除Charging release	充电电流 > 1A Charging current > 1A		
7	放电过流2保护 Discharging overcurrent 2 protection	放电过流2保护电流 Discharging overcurrent 2 protection current	175A	可设 Yes	出现 3 次将锁定该状态，不再自动解除 If it occurs continuously for 3 times, the state will be locked and will not be automatically released
		放电过流2保护延时 Discharging overcurrent 2 protection delay	1000mS	可设 Yes	
	放电过流 2 保护解除 Discharging overcurrent 2 protection release	自动解除Automatically release	— —		
		充电解除Charging release	充电电流 > 1A Charging current > 1A		
8	反接保护 Reverse	— —	无法自动解除，必须关机重启 Cannot be automatically released.		



	connection protection		and the device must be shut down and restarted		
9	短路保护 Short-circuit protection	短路保护功能 Short-circuit protection function	有Yes		连续出现 5 次 将锁定该状态, 不再自动解除 If it occurs continuously for 5 times, the state will be locked and will not be automatically released
		短路保护解除 Short-circuit protection release	1min后, 短路保护解除 Short-circuit protection will be released after 1 minute		
10	MOS 高温保护 MOS high temperature protection	MOS 高温告警温度 MOS high temperature alarm temperature	90℃	可设 Yes	
		MOS 高温保护温度 MOS high temperature protection temperature	115℃	可设 Yes	
		MOS 保护解除温度 MOS protection release temperature	50℃	可设 Yes	
11	电芯温度保护 Cell temperature protection	充电低温告警温度 Charging low temperature alarm temperature	0℃	可设 Yes	
		充电低温保护温度 Charging low temperature protection temperature	-10℃	可设 Yes	
		充电低温保护解除温度 Charging low temperature protection release temperature	5℃	可设 Yes	
		充电高温告警温度 Charging high temperature alarm temperature	55℃	可设 Yes	
		充电高温保护温度 Charging high temperature protection temperature	65℃	可设 Yes	
		充电高温保护解除温度 Charging high temperature protection release temperature	50℃	可设 Yes	
		放电低温告警温度 Discharging low temperature alarm temperature	-0℃	可设 Yes	
		放电低温保护温度 Discharging low temperature protection temperature	-20℃	可设 Yes	
		放电低温保护解除温度 Discharging low temperature protection release temperature	5℃	可设 Yes	
		放电高温告警温度 Discharging high temperature alarm temperature	50℃	可设 Yes	
		放电高温保护温度 Discharging high temperature protection temperature	65℃	可设 Yes	
		放电高温保护解除温度 Discharging high temperature protection release temperature	50℃	可设 Yes	
12	环境温度告警 Ambient temperature alarm	环境低温告警温度 Ambient low temperature alarm temperature	-10℃	可设 Yes	
		环境低温保护温度 Ambient low temperature protection temperature	-20℃	可设 Yes	
		环境低温保护解除温度 Ambient low temperature protection release temperature	-10℃	可设 Yes	
		环境高温告警温度 Ambient high temperature alarm temperature	60℃	可设 Yes	
		环境高温保护温度 Ambient high temperature protection temperature	70℃	可设	



		temperature protection temperature		Yes	
		环境高温保护解除温度 Ambient high temperature protection release temperature	50℃	可设 Yes	
13	消耗电流 Consumption current	工作时自耗电电流 Self-consumption current during operation	≤15mA		
		低功耗模式电流 Low power consumption mode current	≤1mA		
14	均衡功能 Equalization function	均衡开启电压 Equalization activation voltage	3400mV	可设 Yes	单体间压差大于 1V时, 不应启动均衡 When the voltage difference between single cells is greater than 1V, the equalization should not be started
		开启压差 Activation voltage difference	50mV	可设 Yes	
15	容量默认设置 Capacity default setting	低电量告警 Low battery alarm	SOC<5%	可设 Yes	充电时不告警 No alarm during
16	休眠功能 Hibernation function	休眠电压 Hibernation voltage	2600mV	可设 Yes	
		延迟时间 Delay time	10min	可设 Yes	
17	电芯失效保护 Cell failure protection	单体压差 Voltage difference between single cells	压差>800mV		不允许充放电 Charging and discharging are not allowed
18	满充判断 Full charge judgment	满充电压 Full charge voltage	58.4V		
		截止电流 Cut-off current	0.5A		

表5-1 参数配置 Table 5-1 Parameter Configuration

5.2. LED 指示说明 LED Indication Instructions

闪灯方式定义 Definition of flashing mode

备注：可通过上位机使能或禁止 LED 指示灯告警，出厂默认为使能的。

Note: The LED indicator light alarm can be enabled or disabled through the upper computer, and it is enabled by default when leaving the factory.

运行方式 Operation mode	亮(秒) On (seconds)	灭(秒) Off (seconds)
闪1 Flash 1	0.5	3.5
闪2 Flash 2	0.5	0.5
闪3 Flash 3	0.5	1.5

表5-2 闪灯模式 Table 5-2 Flashing Mode



5.2.1. 4 个 SOC 指示灯 SOC indicator lights

各个状态下的闪灯方式定义 Definition of the flashing mode in various states:

状态 Status	正常/告警/保护 Normal/Alarm/Protection	运行灯 Operation Light	告警灯 Alarm Light	电量灯 Power Light						备注 Remarks
				25%	50%	75%	100%	—	—	
关机 Shutdown	休眠 Hibernation	灭 Off	灭 Off	灭 Off	灭 Off	灭 Off	灭 Off			
待机 Standby	正常 Normal	闪1 Flash 1	灭 Off	依据电量指示 According to the power indication						待机状态 On standby
	告警 Alarm	闪1 Flash 1	闪3 Flash 3							所有告警和保护 (不包括过充告警和保护) (Excluding overcharge alarm and protection)
失效 Failure	电芯故障 Cell failure	闪2 Flash 2	闪2 Flash 2	闪2 Flash 2	灭 Off	灭 Off	灭 Off			停止充放电 Stop charging and discharging
	充放电MOS故障 Charging and discharging MOS failure	闪2 Flash 2	闪2 Flash 2	灭 Off	闪2 Flash 2	灭 Off	灭 Off			停止充放电 Stop charging and discharging
	AFE故障 AFE failure	闪2 Flash 2	闪2 Flash 2	灭 Off	灭 Off	闪2 Flash 2	灭 Off			停止充放电 Stop charging and discharging
	电流采样电阻故障 Current sampling resistor failure	闪2 Flash 2	闪2 Flash 2	灭 Off	灭 Off	灭 Off	闪2 Flash 2			停止充放电 Stop charging and discharging
	电压故障 Voltage failure	闪2 Flash 2	闪2 Flash 2	灭 Off	灭 Off	灭 Off	灭 Off			停止充放电 Stop charging and discharging
	反接故障 Reverse connection failure	闪2 Flash 2	闪2 Flash 2	灭 Off	灭 Off	灭 Off	灭 Off			停止充放电 Stop charging and discharging
	短路 Short circuit	闪2 Flash 2	闪2 Flash 2	闪2 Flash 2	闪2 Flash 2	闪2 Flash 2	闪2 Flash 2			停止充放电 Stop charging and discharging

表 5-5 4SOC 闪灯含义 Table 5-3 Flashing Meanings of 4 SOC Lights

状态 Status	充电 Charging				放电/待机 Discharging/Standby			
容量指示灯 Capacity indicator light	LED1	LED2	LED3	LED4	LED1	LED2	LED3	LED4
0%~25%	闪2 Flash 2	灭 Off	灭 Off	灭 Off	常亮 Normally on	灭 Off	灭 Off	灭 Off
25%~50%	常亮 Normally on	闪2 Flash 2	灭 Off	灭 Off	常亮 Normally on	常亮 Normally on	灭 Off	灭 Off
50%~75%	常亮 Normally on	常亮 Normally on	闪2 Flash 2	灭 Off	常亮 Normally on	常亮 Normally on	常亮 Normally on	灭 Off
75%~100%	常亮 Normally on	常亮 Normally on	常亮 Normally on	闪2 Flash 2	常亮 Normally on	常亮 Normally on	常亮 Normally on	常亮 Normally on
—								
运行灯 Operation Light	常亮 Normally on				闪3 Flash 3			

表 5-6 4SOC 容量表现方式 Table 5-4 Capacity Representation of 4 SOC Lights

5.3. 蜂鸣器动作说明 Buzzer Action Instructions

- (1) 开机上电，蜂鸣器长鸣一声；When powering on, the buzzer emits a long beep;
- (2) 关机休眠，蜂鸣器短鸣一声；When shutting down and hibernating, the buzzer emits a short beep;
- (3) 短路保护时，蜂鸣器每隔 2S 鸣叫一声,短路保护 3 次锁定后，蜂鸣器不再鸣叫；蜂鸣器功能可通过上位机使能或禁止，出厂默认是禁止的；

In case of short-circuit protection, the buzzer beeps every 2 seconds. After the short-circuit protection is locked for 3 times, the buzzer stops beeping; The buzzer function can be enabled or disabled through the upper computer, and it is disabled by default when leaving the factory;

- (4) 蜂鸣器功能禁止时，在保护板告警和保护时（短路和反接保护除外），蜂鸣器不工作；



When the buzzer function is disabled, the buzzer does not work when the protection board gives an alarm and protection (excluding short-circuit and reverse connection protection);

5. 4. 弱电开关说明 Weak Current Switch Instructions

(1)当弱电开关常闭状态, BMS 保护板正常工作。

When the weak current switch is in the normally closed state, the BMS protection board works normally.

(2)当弱电开关常开状态, BMS 保护板关机。

When the weak current switch is in the normally open state, the BMS protection board shuts down.

5. 5. 休眠及唤醒 Hibernation and Wake-up

5. 5. 1. 休眠 Hibernation

为了降低整个系统的功耗, 系统具有休眠功能, 当满足以下条件时, 系统将进入休眠模式:

To reduce the power consumption of the entire system, the system has a hibernation function. When the following conditions are met, the system will enter the hibernation mode:

(1) 单体过放保护 5 分钟仍未解除 (可设置)。

The single cell overdischarge protection has not been released within 5 minutes (can be set).

(2) 待机状态持续时间达到 24 小时 (无通讯、无充放电、无充电器接入, 可设置)。

The standby state lasts for 24 hours (no communication, no charging or discharging, no charger connected, can be set).

5. 5. 2. 唤醒 Wake-up

结合实际情况, 为了方便使用, 系统提供了多种不同的唤醒方式:

Combined with the actual situation, for the convenience of use, the system provides multiple different wake-up methods:

(1) 充电唤醒: 接入充电器, 充电机电压大于 36V;

Charging wake-up: Connect the charger, and the charger voltage is greater than 36V;

(2) 自动唤醒: 自动唤醒使能, 且配置时间大于 0, 非按键手动关机或者低电量关机;

Automatic wake-up: The automatic wake-up is enabled, and the configured time is greater than 0, and it is not manually shut down by the button or shut down due to low battery;

5. 6. 充电限流功能 Charging Current Limiting Function

(1) 保护板具有充电限流功能, 充电限流为 $10\pm1A$, 用户可通过上位机设置限流启动条件和限流功能的开启和关闭。

The protection board has a charging current limiting function, and the charging current limiting is $10\pm1A$. The user can set the current limiting activation condition and the on/off of the current limiting function through the upper computer.

(2) 充电限流默认启动条件为充电电流大于 80A(可设置), 进入限流模式后, 充电电流小于 2A, 或者 10 分钟后自动退出限流模式。

The default activation condition for charging current limiting is that the charging current is greater than 80A (can be set). After entering the current limiting mode, it will automatically exit the current limiting mode when the charging current is less than 2A or after 10 minutes.

5. 7. 加热或散热功能 (预留) Heating or Cooling Function (Reserved)

(1) 保护板预留充放电加热控制功能 (默认不提供), BMS 实时监控电芯温度, 当电芯温度最小值低于加热开启温度时, 保护板启动加热功能, 当所有电芯温度达到加热关闭温度时, 加热功能关闭;

The protection board reserves the charging and discharging heating control function (not provided by default). The BMS monitors the cell temperature in real time. When the minimum value of the cell temperature is lower than the heating activation temperature, the protection board activates the heating function. When the temperature of all cells reaches the heating shutdown temperature, the heating function is turned off.

(2) 保护板预留充放电散热控制功能 (默认不提供), BMS 实时监控电芯温度, 当电芯温度最高值大于散热开启温度时, 保护板启动散热功能, 当所有电芯温度达到散热关闭温度时, 散热功能关闭;

The protection board reserves the charging and discharging cooling control function (not provided by default). The BMS monitors the cell temperature in real time. When the maximum value of the cell temperature is greater than the cooling activation temperature, the protection board activates the cooling function. When the temperature of all





cells reaches the cooling shutdown temperature, the cooling function is turned off.

(3) 加热功能最大输出电流为 3A，即 48V 时最大负载能力为 150W；

The maximum output current of the heating function is 3A, that is, the maximum load capacity at 48V is 150W.

(4) 加热与散热功能共用一个控制输出脚，同时只能提供其中一种功能（默认是加热），可以通过用户特性配置该控制脚的功能。

The heating and cooling functions share a control output pin, and only one of the functions can be provided at the same time (heating is provided by default), and the function of this control pin can be configured according to user characteristics.

六、通信说明 Communication Instructions

6.1. USB 通信 USB Communication

USB 接口采用 TYPE B 端口，BMS 可以通过该接口与上位机进行通讯，从而在上位机端监控电池的各种信息，包括电池电压、电流、温度、状态、SOC、SOH 及电池生产信息等，默认波特率为 115200bps。

The USB interface adopts the TYPE B port. The BMS can communicate with the upper computer through this interface, so as to monitor various information of the battery at the upper computer end, including battery voltage, current, temperature, status, SOC, SOH and battery production information, etc. The default baud rate is 115200bps.

6.2. RS485 通信 RS485 Communication

具有 2 路 RS485 接口 It has 2 RS485 communication interfaces:

(1) RS485-1 为单端 RJ45 网络端口，主要用于电池组与逆变器间的数据交互，默认波特率为 9600bps。

RS485-1 is a single-ended RJ45 network port, which is mainly used for data interaction between the battery pack and the inverter. The default baud rate is 9600bps.

(2) RS485-2 为双端 RJ45 网络端口，用于电池组的级联并机之间的数据交互，目前并机接口最多可支持 32 组电池进行并机操作。

RS485-2 is a double-ended RJ45 network port, which is used for data interaction between cascaded parallel battery packs. Currently, the parallel connection interface can support up to 32 groups of batteries for parallel connection operation.

6.3. CAN 通信 CAN Communication

具有 1 路 CAN 通信接口，为单端 RJ45 网络端口，主要用于电池组与逆变器间的数据交互，默认波特率为 500K；

It has 1 CAN communication interface, which is a single-ended RJ45 network port and is mainly used for data interaction between the battery pack and the inverter. The default baud rate is 500K.

6.4. 拨码开关设置 DIP Switch Configuration

6.4.1. 8 位的拨码开关 An 8 - position DIP switch



8 位的拨码开关可以用于区分主从机，和主机的逆变器协议选择，从机的地址选择，以及不同逆变器总线的末端电阻匹配功能，具体分配参照下表：An 8 - position DIP switch can be used to distinguish between the master and slave, select the inverter protocol for the master, choose the address of the slave, and match the terminal resistance of the bus for different inverters. The specific allocation is as follows in the table:

序号S/N	功能描述Function Description	备注Remarks
1	主从电池选择：ON - 主电池，OFF - 从电池 Master/Slave Battery Selection: ON - Master Battery, OFF - Slave Battery	
2~6	主电池表示逆变器协议选择，从电池表示从机地址	



	For the master battery, it indicates the selection of the inverter protocol; for the slave battery, it indicates the address of the slave	
7	RS485-1总线的末端电阻匹配: ON - 接入, OFF - 断开 Terminal Resistance Matching for RS485-1 Bus: ON - Connected, OFF - Disconnected	
8	CAN总线的末端电阻匹配: ON - 接入, OFF - 断开 Terminal Resistance Matching for CAN Bus: ON - Connected, OFF - Disconnected	

表 6-1 8 位拨码开关位定义 Table 6 - 1 Definition of 8 - position DIP Switch Positions

地址 Address	拨码设置DIP settings						备注 Remarks
	#1	#2	#3	#4	#5	#6	
1	ON	XX	XX	XX	XX	XX	主电池1 Master battery 1
2	OFF	OFF	OFF	OFF	OFF	OFF	从电池2 Slave battery 2
3	OFF	ON	OFF	OFF	OFF	OFF	从电池3 Slave battery 3
4	OFF	OFF	ON	OFF	OFF	OFF	从电池4 Slave battery 4
5	OFF	ON	ON	OFF	OFF	OFF	从电池5 Slave battery 5
6	OFF	OFF	OFF	ON	OFF	OFF	从电池6 Slave battery 6
7	OFF	ON	OFF	ON	OFF	OFF	从电池7 Slave battery 7
8	OFF	OFF	ON	ON	OFF	OFF	从电池8 Slave battery 8
9	OFF	ON	ON	ON	OFF	OFF	从电池9 Slave battery 9
10	OFF	OFF	OFF	OFF	ON	OFF	从电池10 Slave battery 10
11	OFF	ON	OFF	OFF	ON	OFF	从电池11 Slave battery 11
12	OFF	OFF	ON	OFF	ON	OFF	从电池12 Slave battery 12
13	OFF	ON	ON	OFF	ON	OFF	从电池13 Slave battery 13
14	OFF	OFF	OFF	ON	ON	OFF	从电池14 Slave battery 14
15	OFF	ON	OFF	ON	ON	OFF	从电池15 Slave battery 15
16	OFF	OFF	ON	ON	ON	OFF	从电池16 Slave battery 16
17	OFF	ON	ON	ON	ON	OFF	从电池17 Slave battery 17
18	OFF	OFF	OFF	OFF	OFF	ON	从电池18 Slave battery 18
19	OFF	ON	OFF	OFF	OFF	ON	从电池19 Slave battery 19
20	OFF	OFF	ON	OFF	OFF	ON	从电池20 Slave battery 20



地址 Address	拨码设置DIP settings						备注 Remarks
21	OFF	ON	ON	OFF	OFF	ON	从电池21 Slave battery 21
22	OFF	OFF	OFF	ON	OFF	ON	从电池22 Slave battery 22
23	OFF	ON	OFF	ON	OFF	ON	从电池23 Slave battery 23
24	OFF	OFF	ON	ON	OFF	ON	从电池24 Slave battery 24
25	OFF	ON	ON	ON	OFF	ON	从电池25 Slave battery 25
26	OFF	OFF	OFF	OFF	ON	ON	从电池26 Slave battery 26
27	OFF	ON	OFF	OFF	ON	ON	从电池27 Slave battery 27
28	OFF	OFF	ON	OFF	ON	ON	从电池28 Slave battery 28
29	OFF	ON	ON	OFF	ON	ON	从电池29 Slave battery 29
30	OFF	OFF	OFF	ON	ON	ON	从电池30 Slave battery 30
31	OFF	ON	OFF	ON	ON	ON	从电池31 Slave battery 31
32	OFF	OFF	ON	ON	ON	ON	从电池32 Slave battery 32
32	OFF	ON	ON	ON	ON	ON	从电池33 Slave battery 33

表 6-2 拨码开关地址 Table 6-2 DIP Switch Address

地址 Address	拨码设置DIP settings						备注Address	
	#1	#2	#3	#4	#5	#6	RS485 协议 Protocol	CAN 协议 Protocol
1	ON	ON	OFF	OFF	OFF	OFF	VKING	VKING
2	ON	OFF	ON	OFF	OFF	OFF	VOLTRONIC	GOODWE
3	ON	ON	ON	OFF	OFF	OFF	GROWATT	GROWATT
4	ON	OFF	OFF	ON	OFF	OFF	SOLAX	SOLAX
5	ON	ON	OFF	ON	OFF	OFF	LTW	SOFAR
6	ON	OFF	ON	ON	OFF	OFF	SZPC	LUXPOWER
7	ON	ON	ON	ON	OFF	OFF	MUST	MUST
8	ON	OFF	OFF	OFF	ON	OFF	SRNE	LTW
9	ON	ON	OFF	OFF	ON	OFF	BAYKEE	VICTRON
10	ON	OFF	ON	OFF	ON	OFF	SMK	PYLON
11	ON	ON	ON	OFF	ON	OFF	AFORE	SOROTEC
12	ON	OFF	OFF	ON	ON	OFF	GENIXGREEN	AFORE
13	ON	ON	OFF	ON	ON	OFF	BITTA	IMEON
14	ON	OFF	ON	ON	ON	OFF	STONE	SCHNEIDER
15	ON	ON	ON	ON	ON	OFF	PYLONE	DEYE



16	ON	OFF	OFF	OFF	OFF	ON	EPEVER	INHENERGY
17	ON	ON	OFF	OFF	OFF	ON	KSTAR	SMA
18	ON	OFF	ON	OFF	OFF	ON	SUNFLY	GINLONG
19	ON	ON	ON	OFF	OFF	ON		DONNERGY
20	ON	OFF	OFF	ON	OFF	ON		SENERGY
21	ON	ON	OFF	ON	OFF	ON		SUNWAYS
22	ON	OFF	ON	ON	OFF	ON		STUDER
23	ON	ON	ON	ON	OFF	ON		INVT
24	ON	OFF	OFF	OFF	ON	ON		KSTAR
25	ON	ON	OFF	OFF	ON	ON		DEYE
26	ON	OFF	ON	OFF	ON	ON		ALTENERGY
27	ON	ON	ON	OFF	ON	ON		
28	ON	OFF	OFF	ON	ON	ON		
29	ON	ON	OFF	ON	ON	ON		
30	ON	OFF	ON	ON	ON	ON		
31	ON	ON	ON	ON	ON	ON		

表 6-3 协议选择 Table 6-3 Protocol Selection

6. 4. 2. 4 位的拨码开关 An 4 - position DIP switch



4 位的拨码开关只能用于电池包地址的编址，具体的地址映射参见下表：

A 4 - position DIP switch can only be used for addressing the battery pack address. For the specific address mapping, please refer to the following table:

地址 Address	拨码设置DIP settings				备注Address
	#1	#2	#3	#4	
1	OFF	OFF	OFF	OFF	主电池1 Master battery 1
2	ON	OFF	OFF	OFF	从电池2 Slave battery 2
3	OFF	ON	OFF	OFF	从电池3 Slave battery 3
4	ON	ON	OFF	OFF	从电池4 Slave battery 4
5	OFF	OFF	ON	OFF	从电池5 Slave battery 5
6	ON	OFF	ON	OFF	从电池6 Slave battery 6
7	OFF	ON	ON	OFF	从电池7 Slave battery 7
8	ON	ON	ON	OFF	从电池8 Slave battery 8
9	OFF	OFF	OFF	ON	从电池9 Slave battery 9
10	ON	OFF	OFF	ON	从电池10 Slave battery 10



11	OFF	ON	OFF	ON	从电池11 Slave battery 11
12	ON	ON	OFF	ON	从电池12 Slave battery 12
13	OFF	OFF	ON	ON	从电池13 Slave battery 13
14	ON	OFF	ON	ON	从电池14 Slave battery 14
15	OFF	ON	ON	ON	从电池15 Slave battery 15
16	ON	ON	ON	ON	从电池16 Slave battery 16

表 6-4 拨码开关地址 Table 6-2 DIP Switch Address

七、电磁兼容性 Electromagnetic Compatibility

7. 1. 静电放电抗扰性 Electrostatic Discharge Immunity

满足 GB/T 17626.2-2018 等级 4 的要求，接触 8KV，空气 15KV；试验后能正常工作。

It meets the requirements of Grade 4 in GB/T17626.2-2018, with a contact voltage of 8KV and an air voltage of 15KV; It can work normally after the test.

7. 2. 传导骚扰限值 Conducted Emission Limits

满足传导骚扰限值应符合表 7-1 的要求（引自 GB 9254-2008 中第 5.1 条中表 1）；试验后能正常工作。

It meets the requirements of the conducted emission limits as specified in Table 7-1 (quoted from Table 1 in Article 5.1 of GB9254-2008); It can work normally after the test.

频率范围 / MHz Frequency Range / MHz	限值 Limit / dB(μV)	
	准峰值 Quasi-peak Value	平均值 Average Value
0.15~0.50	79	66
0.50~30	73	60

表 7-1 传导骚扰限值 Table 7-1 Conducted Emission Limits

7. 3. 辐射骚扰限值 Radiated Emission Limits

满足辐射骚扰限值应符合表 7-2 的要求（引自 GB 9254-2008 中第 6.1 条中表 5）；试验后能正常工作。

It meets the requirements of the radiated emission limits as specified in Table 7-2 (quoted from Table 5 in Article 6.1 of GB9254-2008); It can work normally after the test.

频率范围 / MHz Frequency Range / MHz	准峰值限值 / dB(μV / m) Quasi-peak Value Limit / dB(μV/m)
30~230	40
230~1000	47

表 7-2 辐射骚扰限值 Table 7-2 Radiated Emission Limits

7. 4. 浪涌（冲击）抗扰性 Surge (Impact) Immunity

通信端口和电源端口应采用相应的隔离措施，通信端口线对线应满足 GB/T 17626.5-2019 等级 2（开路试验电压 0.5kV）的要求，线对地应满足 GB/T 17626.5-2019 等级 2（开路试验电压 1kV）的要求；电源端口线对线应满足 GB/T 17626.5-2019 等级 4（开路试验电压 2kV）的要求，线对地应满足 GB/T 17626.5-2019 等级 4（开路试验电压 4kV）的要求。

Corresponding isolation measures should be adopted for the communication port and the power port. The line-to-line of the communication port should meet the requirements of Grade 2 in GB/T 17626.5-2019






(open-circuit test voltage of 0.5kV), and the line-to-ground should meet the requirements of Grade 2 in GB/T 17626.5-2019 (open-circuit test voltage of 1kV); The line-to-line of the power port should meet the requirements of Grade 4 in GB/T 17626.5-2019 (open-circuit test voltage of 2kV), and the line-to-ground should meet the requirements of Grade 4 in GB/T 17626.5-2019 (open-circuit test voltage of 4kV).

八、接口定义 Interface Definition

8.1. 通信接口图示 Communication Interface Diagram


8.1.1. USB 通讯端口定义（接上位机） Definition of USB communication port (connected to the upper computer)

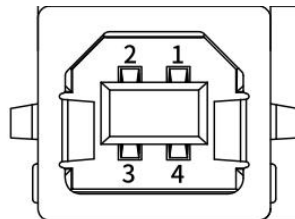

接口 Interface	定义说明 Definition Description	
X7 通讯端口定义 Definition of the communication port	PIN 1	VBUS
	PIN 2	D-
	PIN 3	D+
	PIN 4	GND

表 8-1 USB 端口定义 Table 8-1 Definition of the USB Port

8.1.2. RS485-2 通讯接口定义 Definition of the RS485-2 communication interface

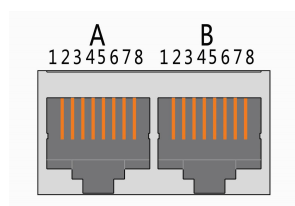


接口 Interface	定义说明 Definition Description			定义说明 Definition Description		
X2 通讯端口定义 Definition of the communication port	A 部分 Part A RS485-2 并机接口 Parallel interface	PIN 1	RS485-B2	B 部分 Part B RS485-2 并机接口 Parallel interface	PIN 1	RS485-B2
		PIN 2	RS485-A2		PIN 2	RS485-A2
		PIN 3	GND		PIN 3	GND
		PIN 4	NC(空) NC (empty)		PIN 4	NC(空) NC (empty)
		PIN 5	NC(空) NC (empty)		PIN 5	NC(空) NC (empty)
		PIN 6	GND		PIN 6	GND
		PIN 7	RS485-A2		PIN 7	RS485-A2
		PIN 8	RS485-B2		PIN 8	RS485-B2

表 8-2 RS485-2 端口定义 Table 8-4 Definition of the RS485-2 Port



8.1.3. RS485-1/CAN 通讯接口定义 Definition of the RS485-1/CAN communication interface

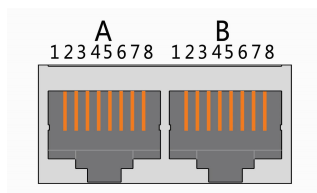

接口 Interface	定义说明 Definition Description		定义说明 Definition Description			
X1 通讯端口定义 Definition of the communication port	B 部分 Part A CAN接口 CAN interface	PIN 1	NC (空) NC (empty)	A 部分 Part A RS485-1接口 RS485-1 interface	PIN 1	RS485-B1
		PIN 2	NC (空) NC (empty)		PIN 2	RS485-A1
		PIN 3	CGND		PIN 3	RS485-GND
		PIN 4	CAN1-H		PIN 4	NC (空) NC (empty)
		PIN 5	CAN1-L		PIN 5	NC (空) NC (empty)
		PIN 6	CGND		PIN 6	RS485-GND
		PIN 7	NC (空) NC (empty)		PIN 7	RS485-A1
		PIN 8	NC (空) NC (empty)		PIN 8	RS485-B1

8.2. 电气接口定义 Definition of Electrical Interfaces

接口 Interface	定义说明 Definition Description	
B+	BMS 供电端子，接电池组 B+（总正） BMS power supply terminal, connected to B+ (total positive) of the battery pack	
B-	接电池组 B-（总负） Connected to the negative terminal (total negative) of the battery pack B	
P-	接充电器或者负载的负端（P-） Connected to the negative terminal (P-) of the charger or load	
CN1(1#) 电芯电压检测接口：1 Cell voltage detection interface: 1	接口 Interface	定义 Definition
	CN1-1	B0（黑色线） B0 (black wire)
	CN1-2	B1+
	CN1-3	B2+
	CN1-4	B3+
	CN1-5	B4+
	CN1-6	B5+
	CN1-7	B6+
	CN1-8	B7+
	CN1-9	B8+
CN2(2#) 电芯电压检测接口：2 Cell voltage detection interface: 2	接口 Interface	定义 Definition
	CN2-1	B9-（黑色线） B9- (black wire)
	CN2-2	B9+
	CN2-3	B10+
	CN2-4	B11+
	CN2-5	B12+
	CN2-6	B13+
	CN2-7	B14+
	CN2-8	B15+
	CN2-9	B16+
	CN2-10	NC(悬空)



		NC (not connected)
	接口 Interface	定义 Definition
CN3 电芯温度检测接口 Cell Cell temperature detection interface	CN3-1	NTC1+
	CN3-2	NTC1-
	CN3-3	NTC2+
	CN3-4	NTC2-
	CN3-5	NTC3+
	CN3-6	NTC3-
	CN3-7	NTC4+
	CN3-8	NTC4-
X5 电加热插座（预留） Electrical heating socket (Reserved)	接口 Interface	定义 Definition
	X5-1	HEAT（加热控制正端） HEAT (Positive terminal of heating control)
	X5-2	P- (加热控制负端) P- (Negative terminal of heating control)

表 8-3 采样线端口定义 Table 8-5 Definition of the Sampling Wire Port

8.3. 安装连接说明 Installation and Connection Instructions


8.3.1. 保护板安装和拆除 Installation and removal of the protection board

保护板上电有严格的顺序要求，先焊接 B-、P-、B+、P+，依次由低到高的顺序插接电池采样线连接器，上电后需要充电或按键激活。所有连接线安装好后才能加负载或充电器。

There are strict sequential requirements for powering on the protection board. First, weld B-, P-, B+, and P+. Then, insert the battery sampling wire connectors in ascending order. After powering on, it needs to be charged or activated by pressing a button. Load or charger can be added only after all connection wires are installed.

拆除时，先拔掉充电器或负载，依次由高到低的顺序拆卸电池采样线连接器，最后拆卸 B+、P+、B-、P-。PACK 组装安装示意图如下：

When removing, first unplug the charger or load, then remove the battery sampling wire connectors in descending order, and finally remove B+, P+, B-, and P-. The PACK Assembly Installation Schematic is shown below:

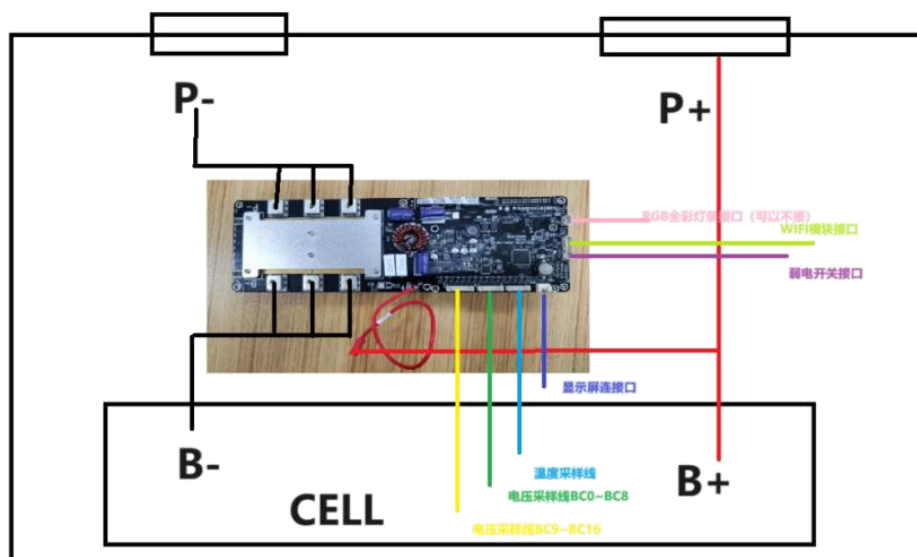

8.3.2. 并机接线安装 Installation of parallel connection wiring


并机时需要注意只有相同类型和串数的电池包才能相互并联使用，否则不同串数的电池包并联，电池包之间的电压差会导致电池包之间相互放电而无法正常使用。VKPG5 版本的硬件用 RS485 总线实现并机，默认的最大从机数量上限为 32，使用标准网线连接，如下图 8-1 所示：

When making parallel connections, it should be noted that only battery packs of the same type and the same number of series can be connected in parallel. Otherwise, when battery packs with different numbers of series are connected in parallel, the voltage difference between the battery packs will cause mutual discharge between the





battery packs, making them unable to be used normally. The VKPG5 hardware achieves paralleling via the RS485 bus, with a default maximum limit of 32 slaves. Connection is made using standard network cables, as shown in Fig. 8-1 below:

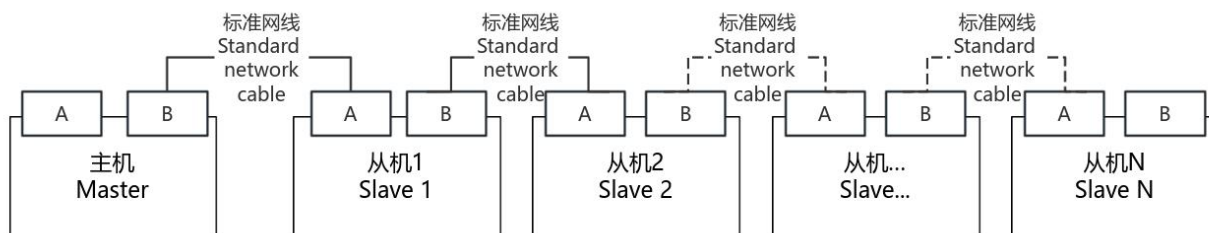

图

8-1 并机接线示意图 Fig. 8-1 Schematic Diagram of Parallel Connection Wiring

建议所有从机地址应该连续,以提高主机扫描从机的效率。开机时先开从机,最后再开主机。主机开机后或自动开始扫描从机,并根据扫描结果确定最大从机的数量, 注:主机锁定从机数量后,不会再改变,如果出现没有扫描到从机的情况,可以先确认从机已开机,然后再重启主机观察。

All slave addresses should be consecutive to improve master scanning efficiency. First power on all slaves, then the master last. After power-up, the master automatically scans for slaves and determines the maximum number of slaves based on the scan results. Note: Once the master locks the number of slaves, it will not change. If no slaves are detected, verify that all slaves are powered on, then restart the master to observe.

九、协议支持 Protocol Support

如第 6 章所述,本保护板的 RS485 和 CAN 通信端口可支持多种逆变器协议,具体协议详见下表;

As described in Chapter 6, the RS485 and CAN communication ports of this protection board can support multiple inverter protocols, and the specific protocols are shown in the following table;

如有新协议需求,可联系公司技术人员定制。If there are new protocol requirements, you can contact the company's technicians for customization.

协议 Protocol	缩写 Abbreviation	中文名 Chinese Name	RS485 可用 RS485 Available	版本 Version	CAN 可用 CAN Available	版本 Version
NONE	"NONE"		是Yes	0.0	是Yes	0.0
VKING	"VKIN"	问鼎	是Yes	1.0	是Yes	1.0
VOLTRONIC	"VLTC"	日月元	是Yes	1.0		
GROWATT	"GRWT"	古瑞瓦特	是Yes	2.01	是Yes	1.5
SOLAX	"SOLX"	艾罗	是Yes	1.2	是Yes	1.2
LTW	"LTW"	力通威				
PAGE	"PACE"	沛城	是Yes	1.3		
MUST	"MUST"	美世乐	是Yes	1.1	是Yes	1.0
SRNE	"SRNE"	硕日	是Yes	1.0		
SMK	"SMK"		是Yes			
AFORE	"AFOR"	艾伏	是Yes	1.0	是Yes	2.1



GOODWE	“GDWE”	固德威			是Yes	1.5
SOFAR	“SOFA”	首航			是Yes	1.0
LUXPOWER	“LXPR”	鹏城			是Yes	1.0
VICTRON	“VICT”				是Yes	1.0
PYLON	“PYLN”	派能	是Yes	1.0	是Yes	1.2, 2.0
SOROTEC	“SRTC”	索瑞德			是Yes	1.0
SMA	“SMA”				是Yes	1.0
GINLONG	“GNLG”	锦浪			是Yes	1.0
DONNERGY	“DONN”	大能			是Yes	1.0
SOLARFAM	“SLFM”					
IMEON	“IMON”				是Yes	1.0
SCHNEIDER	“SHDR”	施耐德			是Yes	2.0
GENIXGREEN	“GENI”		是 Yes (VKING)	1.0	是Yes	1.0, 3.0
INHENERGY	“INHE”	银河耐吉			是Yes	1.0
BITTA	“BITA”	比瓦特	是Yes	1.1		
STONE	“STON”	石头	是Yes	2.1		
SENERGY	“SENR”	盛能杰			是Yes	1.2
SUNWAYS	“SNWY”	尚唯斯			是Yes	2.0
STUDER	“STDR”				是Yes	1.0
EVEPER	“EPVR”	汇能精电	是Yes	1.5		
INVT	“INVT”	英威腾			是Yes	1.2
KSTAR	“KSTR”	科士达	是Yes	5.0	是Yes	1.18
SUNFLY	“SNFL”	昇辉	是Yes	1.2		
DEYE	“DEYE”	德业			是Yes	1.0
ALTENERGY	“AEPS”	昱能			是Yes	1.6

十、实物图与尺寸图 Physical Diagram and Dimension Diagram

10.1. 主控板标配图 Standard Diagram of Main Control Board

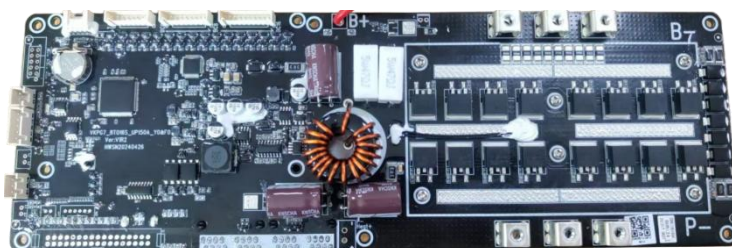


图 10-1 主板标配实物图-正面 Fig. 10-1 Physical Diagram of the Standard Configuration of the Main Board - Front





图 10-2 主板标配实物图-反面 Fig. 10-2 Physical Diagram of the Standard Configuration of the Main Board - Back

10.2. 主板尺寸图 Dimension of Main Board

尺寸 Dimension: 300(L)*100(W) (单位 Unit: mm)

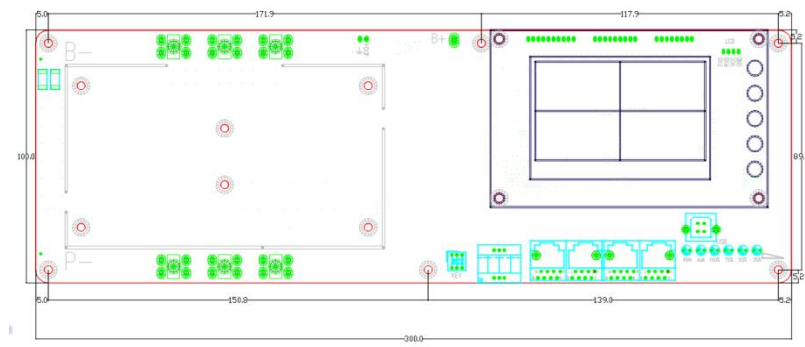


图 10-3 主板尺寸图 Fig. 10-3 Dimension Diagram of the Main Board

十一、使用注意事项 Precautions for Use

- 焊接电池引线时，一定不可有错接或反接。如果确实已接错，这块电路板可能已损坏，需要重新测试合格后才可使用。When welding the battery lead wires, there must be no wrong connection or reverse connection. If it is indeed wrongly connected, this circuit board may be damaged and can only be used after being retested and passing the test.

- 装配时保护板不要直接接触到电芯表面，以免损坏电芯。正确的装配步骤为，先接电池组 B-线，再接上温度采样线，显示屏连接线，然后将电池电压采样线，从低到高，按顺序依次接上，最后接上电池组 B+线。拆除 BMS 时，请按照相反的顺序操作。During assembly, the protection board should not directly contact the surface of the battery cells to avoid damaging the cells. The correct assembly steps are to first connect the B- wire of the battery pack, then connect the temperature sampling wire and the display connection wire, then connect the battery voltage sampling wire in ascending order, and finally connect the B+ wire of the battery pack. When removing the BMS, please operate in the reverse order.

- 使用中注意引线头、烙铁、焊锡等不要碰到电路板上的元器件，否则有可能损坏本电路板。During use, pay attention that the lead wire heads, soldering irons, solder, etc. should not touch the components on the circuit board, otherwise this circuit board may be damaged.

使用过程要注意防静电、防潮、防水等。Pay attention to preventing static electricity, moisture, water, etc. during use.

- 使用过程中请遵循设计参数及使用条件，不得超过本规格书中的值，否则有可能损坏保护板。

During use, please follow the design parameters and usage conditions, and do not exceed the values specified in this manual, otherwise the protection board may be damaged.





- 将电池组和保护板组合好以后，初次上电如发现无电压输出或充不进电，请检查接线是否正确。

After assembling the battery pack and the protection board, if there is no voltage output or the battery cannot be charged during the initial power-on, please check whether the wiring is correct.

- 部分线缆，螺丝，螺母等配件需要客户行采购，以下列表供参考：

Some accessories such as cables, screws, and nuts need to be purchased by the customer. The following list is for reference.

序号 S/N	名称 Name	状态 Status	备注 Remarks
1	上位机通讯线（打印机通讯线） Communication cable for the upper computer (Printer communication cable)	需要客户自行采购 To be purchased by the customer	
2	RS485-1 通信接线 RS485-1 communication wiring	需要客户自行采购 To be purchased by the customer	
3	CAN 通信接线 CAN communication wiring	需要客户自行采购 To be purchased by the customer	
4	RS485-2 通信接线 RS485-2 communication wiring	需要客户自行采购 To be purchased by the customer	标准网线 Standard network cable
6	干接点通信接线 Dry contact communication wiring	需要客户自行采购 To be purchased by the customer	
7	主板固定螺丝，螺母 Set screws and nuts for the main board	需要客户自行采购 To be purchased by the customer	
8	B-,P-节点固定螺丝，螺母 Set screws and nuts for the B- and P- nodes	需要客户自行采购 To be purchased by the customer	

表 11-1 客户自行采购配件说明 Appendix 11-1 Instructions for Accessories Purchased by the Customer

附录 Appendixes

附表 1：选配件清单 Appendix: 1 List of Optional Accessories

序号 S/N	名称 Name	型号 Model	备注 Remarks
1	显示屏 Display screen	各尺寸触摸功能LCD显示屏 Touchscreen LCD displays (various sizes)	需定制软硬件 Customized hardware and software are required
2	WIFI模块 WIFI module	提供WIFI功能和云平台功能 Provide WIFI function and cloud platform function	
3	加热功能 Heating function	提供电池供电加热膜接口，控制开启关闭 Provide an interface for the battery-powered heating film and control the on and off	需定制软硬件 Customized hardware and software are required
4	二次保护 Secondary protection	提供电池供电继电器接口，实现二次保护功能 Provide an interface for the battery-powered relay to achieve the secondary protection function	需定制软硬件 Customized hardware and software are required
5	支持低串电芯 Support low series battery cells	支持8~15串电芯电池包 Support battery packs with 8 to 15-series battery cells	需定制软硬件 Customized hardware and software are required
6	防盗窃模块 Anti-theft module	防盗窃功能，配合云平台实现远程提醒 Anti-theft function, and achieve remote reminder in cooperation with the cloud platform	需定制软硬件 Customized hardware and software are required

附表 1 选配件清单 Appendix 1 List of Optional Accessories

